


# Waste Elimination

## P1 Laboratories

### Solid waste

- ▶ Solid waste must be collected in the laboratory's bins.
- ▶ Full bags must be laid outside of the room.

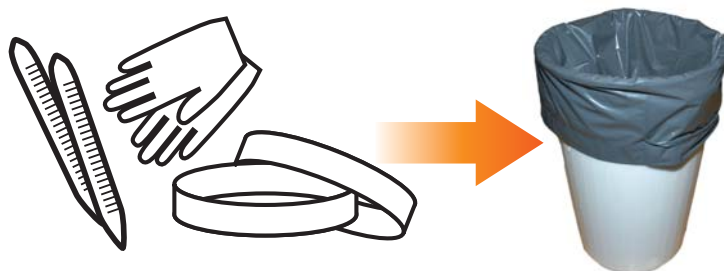

### Liquid waste

- ▶ Liquid wastes must be inactivated by bleach or by another appropriate disinfectant.
- ▶ Let the bleach act for at least 15 min.
- ▶ Dispose of the whole in the sink.



### Sharp waste

- ▶ Pointed or sharp waste must be collected in the yellow boxes "sharps".
- ▶ These yellow boxes, closed and labeled as "Déchets spéciaux", have to be brought to the Special wastes office.



### Recyclable waste

- ▶ Aluminium, paper, cardboard, glass and styrofoam are collected separately.
- ▶ These are brought to the collecting point of the building.



### Contact

dechets-speciaux@sciences.unige.ch



UNIVERSITÉ  
DE GENÈVE

[STEPS]

santé au travail • environnement • prévention • sécurité